


INSTALLATION INSTRUCTIONS FOR AIR HANDLER AND ELECTRIC FURNACE COMBUSTIBLE FLOOR BASE (COUNTERFLOW APPLICATIONS)

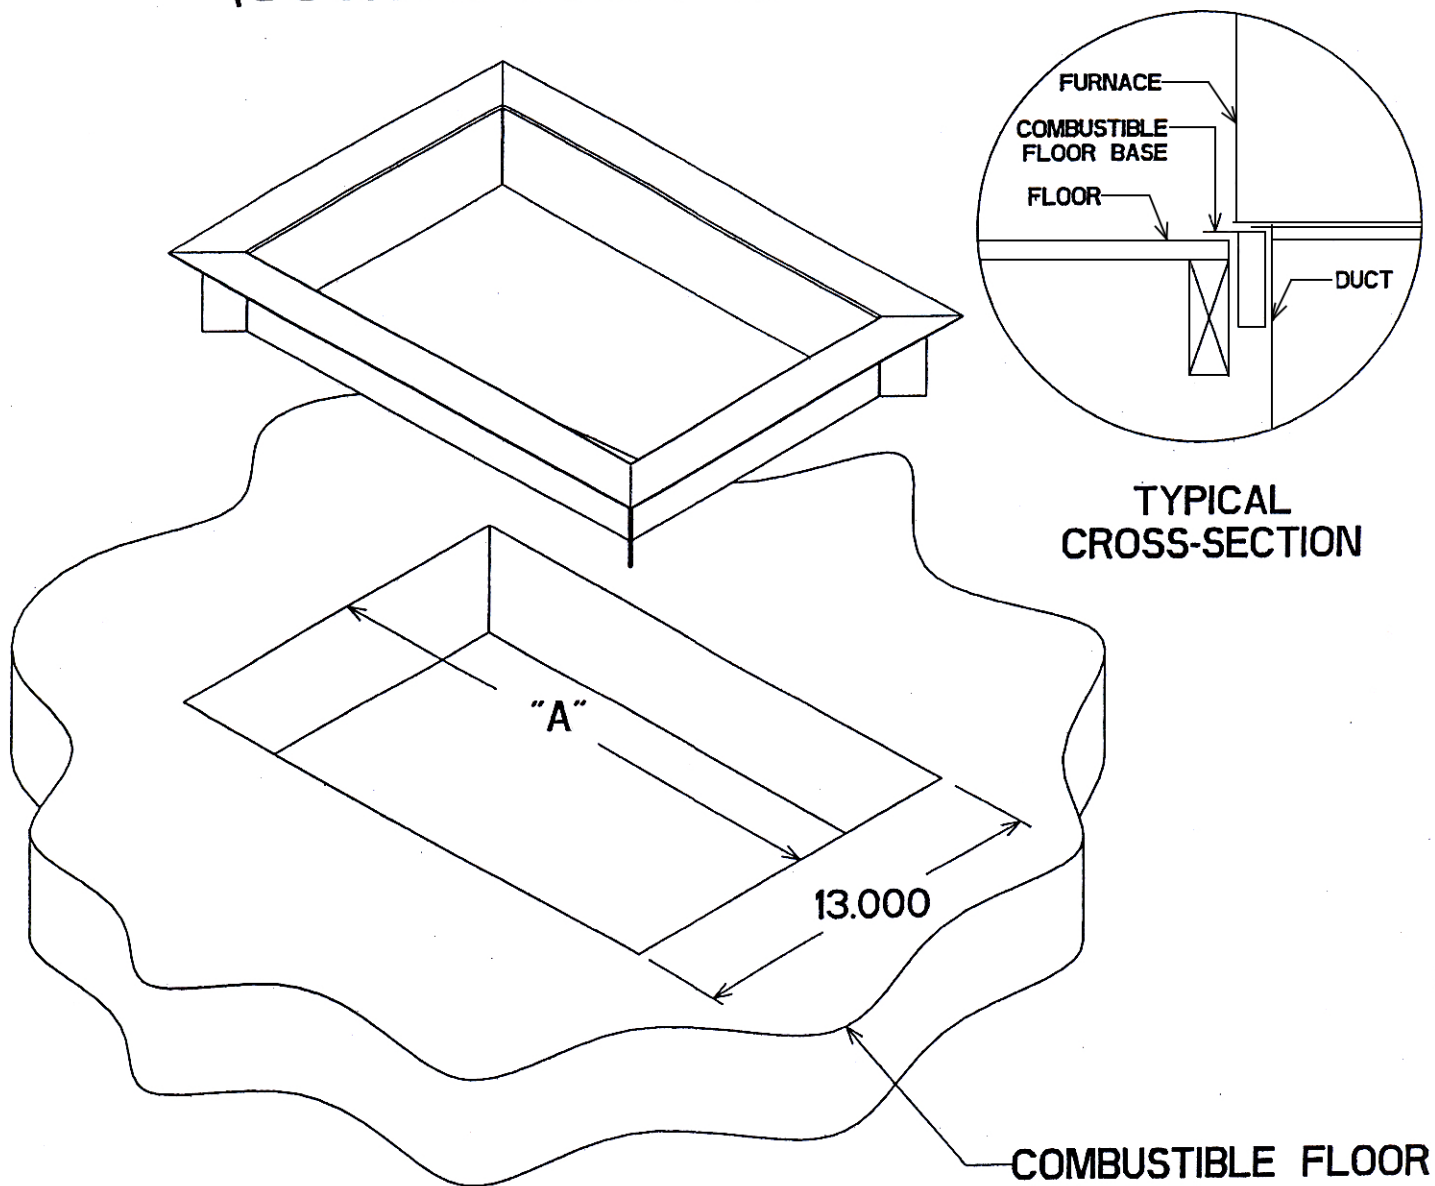

MODEL NUMBER	A
RXHB-17	18.625
RXHB-21	22.125
RXHB-24	25.625

NOTE:
ALLOW A MINIMUM OF 1" CLEARANCE
AROUND HOLE FOR SEATING OF FLOOR BASE.