



E-Mon[®] App Quick Starting Guide

Download E-Mon[®] APP




Google Play Store




1

Please make sure Bluetooth is enabled on your smart-phone.

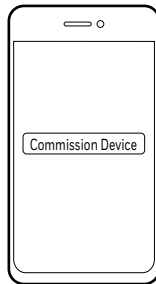

2

After entering App, tap the "Commission Device" option to start commissioning the meter.

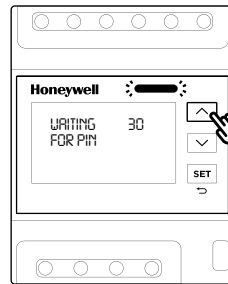


Press the "UP" button

3

Enable BLE on meter.

Step:

1. Press the "UP" button for 3 seconds.
2. Meter LED status bar will begin to blink blue when pairing is initialized.

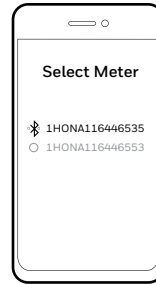

Select Meter

Tap ✓ to pair with the meter.

Tap ↻ to refresh the BLE connection search.

4

List of discovered meters will appear on phone screen.

Select the meter serial number you want to connect or commission your phone with. Tap ✓ to start pairing.


Honeywell

E-Mon[®] App

Quick Starting Guide

A SHARP EYE ON EVERYTHING THAT COUNTS

Online Guides QR Code

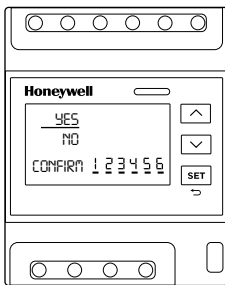


5

A 6-digit pairing code will appear on meter.

Use Up or Down buttons to select Yes to confirm or No to decline pairing on meter.


Press the SET button to confirm.

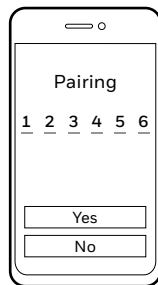

6


Confirm that the same 6-digit code is showing on your phone and meter.

Confirm or decline pairing PIN code on the phone and also on the meter to pair successfully.

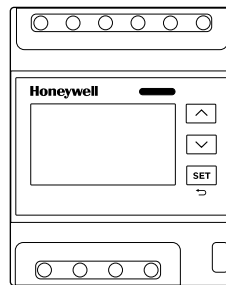

7

Meter LED status bar will be lit solid blue color for 3 seconds when successfully paired.

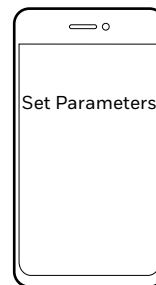

8

Follow subsequent commissioning workflow wizards to save or set all commissioning parameters of meter.